


Muck Cart (CA500) Supplement Instructions



For easy assembly lay parts out to ensure correct quantities of parts.

Within Step Six:

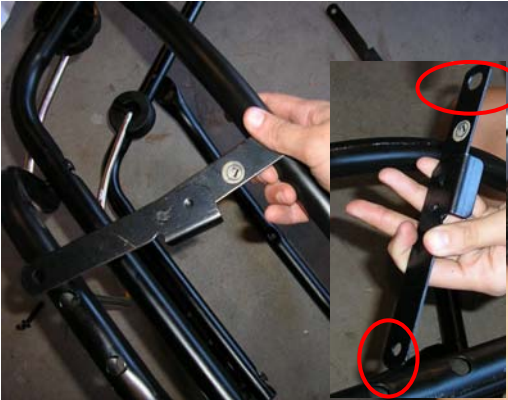

Assemble RH & LH assembly links so the tabs face outward.

Within Step Six



Insert Hex Head bolt into metal bushing and place into metal tubing.

Within Step Six



This is the upper link portion of the link assembly



This is the lower link portion of the link assembly

Within Step Nine



Place spacer on axle and place tire on axle as shown.

Within Step Nine



Picture shows the lower link assembly being assembled to the frame base



Note: If you are unable to fasten both large nyloc nuts at the same time try using a wrench to hold the axle while the large nyloc nuts are tightened

